

## Miyoo

### 燒錄原廠韌體

---

1. 請先修復USB問題
2. SPI Flash(Pin2接地)
3. 不要插入MicroSD
4. 連接USB至PC
5. SPI Flash(Pin2不接地)
6. 執行如下指令：

```
$ cd ~/Downloads
$ wget https://github.com/steward-fu/handheld/blob/master/miyoo/MIYOO_V20_6.bin
$ git clone https://github.com/steward-fu/flc100s_sunxi-tools
$ cd flc100s_sunxi-tools
$ make clean && make
$ sudo ./sunxi-fel -p spiflash-write 0 ~/Downloads/MIYOO_V20_6.bin
100% [=====] 8389 kB, 101.8 kB/s
```

[返回上一頁 \(../handheld.htm\)](#)